TREND NETWORKS

SimplyFIBER™

NaviTEK NT (Plus & Pro)



CONTENTS

Introduction 3
Safety Information 4
Power and Maintenance 4
Tester Layout 6
MODE Selection 7
MAIN Screen 7
MAIN Screen (with network cable connected) 7
MAIN Screen (with unknown network connected) 8
MAIN Screen (with network cable connected to Active Remote) 9
MAIN Screen (with live copper network connected) and TESTS screen 10
MAIN Screen (with live fiber network connected - Pro only) 11
IP details screen 11
NET TEST and Netscan 12
Statistics, VLAN scan, Port, Errors and 802.1x status 13
Power over Ethernet 15
Port Discovery information details 16
Menu Maps 17
Setup 18
Reports 21
Generating and Uploading Reports 22
Specifications - NaviTEK NT Pro 24
Glossary, abbreviations and acronyms 36

Introduction

NaviTEK NT is a network tester for troubleshooting and maintenance of active and passive copper and fiber networks. It performs a range of tests to determine as much information as possible about the network and port to which it is connected.

The principle of operation of NaviTEK NT is that it automatically configures itself to match the characteristics of the connected port, whether it is an un-terminated cable, a live copper switch port or a live fiber switch port, and runs tests appropriate to that configuration. These tests are designed to give information about the port, such as the switch MAC address and identification, as well as to confirm that the port has been properly configured and is capable of reaching a number of strategic targets in the local network and the Internet. The user may customize the tests if required.

Because the suite of tests runs and saves the results automatically, it is a simple task for the user to move from port to port, fully testing and saving the results from each one. All that is required is to plug the tester into the port socket and press the Autotest button.

Once all of the required network ports have been tested, the saved reports can be uploaded either using a USB memory key to a PC or via Wi-Fi to a Smartphone, for transfer to client databases or to colleagues for further analysis.

This manual describes NaviTEK NT Pro, and all references to "NaviTEK NT" shall be taken to mean NaviTEK NT Pro. NaviTEK NT Pro includes provision for testing optical fiber networks as well as copper-based Ethernet networks, and 802.1x security log-in.

NaviTEK NT Plus includes provision for testing copper-based Ethernet networks only and no 802.1x support.

The basic version of NaviTEK NT is described in a separate user manual.

Safety Information

When using NaviTEK NT, always take basic safety precautions to reduce the risk of fire, electric shock and injury to persons. These include the following:

- When connecting to the port, special care must be taken as high voltages may be present and there may be a danger of electrocution.
- Avoid using the tester during an electrical storm - there is a remote risk of electric shock by lightning.
- Use only the mains electricity adaptor supplied with your NaviTEK NT.

DO NOT CONNECT ANY TELECOMMUNICATIONS NETWORK TO ANY OF THE TESTER'S PORTS

Power and Maintenance

NaviTEK NT can be powered from:

- A rechargeable power module,
- Directly from power connected to the DC inlet built in to the power module.
- An optional non-rechargeable battery pack

Power Module Management

The power module must be fully charged before you use it for the first time

A fully charged power module will support up to five hours of heavy, continuous use. For maximum life of the power module it is recommended to discharge it fully and then recharge it fully at least once a month. The power module is not user-serviceable. When it has reached the end of its life, please contact your local TREND representative for service.

Power Module Recharging

The power module can be fully recharged in three hours with the NaviTEK NT switched ON or OFF. To recharge the power module, connect the supplied power adaptor to the DC inlet. For convenience the power module may be removed from, or left attached to, the unit for charging. The Power LED next to the DC inlet glows green to show that the battery is being charged, and flashes green to show that it is not being charged. The power module charge state is indicated at FULL, 2/3, 1/3 and EMPTY by the graphical power meter shown in the display's information bar at the top of its LCD display.

Switching ON and OFF

To switch ON the tester, press the ON/OFF button. A splash screen showing the TREND logo and model identity is shown on the display. The home screen is then shown on the display and NaviTEK NT automatically searches for a network to test.

To switch OFF, press and hold the Power button for approximately 1/2 second, a shutdown message is displayed on the screen. The currently stored setup is saved. If the unit does not switch OFF within five seconds of pressing the Power button, please see *Master Reset*. Always switch OFF the unit before removing the power module.


Caution

Do NOT remove the power module when the tester is switched on.

Power Saving
Power saving preferences are selected from SETUP / SYSTEM / PREF. Auto Off can be Disabled (unit remains ON indefinitely), or set to switch the unit OFF after three, 10 or 30 minutes of inactivity. The backlight can be set to Always On, or to dim to 50% brightness after three minutes of inactivity. Note that when mains power is connected the display is always on full brightness and the unit remains ON indefinitely.

Master Reset
In the unlikely event of a system lock-up which prevents the unit from being switched OFF, it may be necessary to perform a master reset. This will not delete any stored data.

1. Remove the power module to access a small aperture in the NaviTEK NT.
2. Insert a paper clip into the reset hole and press the internal reset switch.

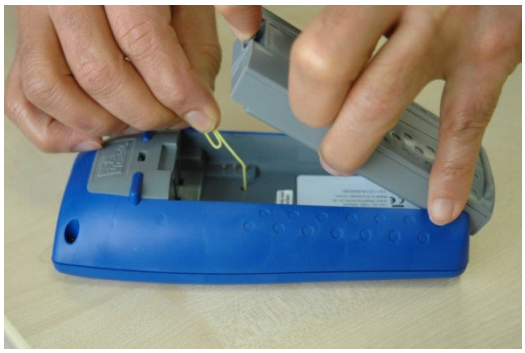

3. Replace the power module.

Replaceable insert – RJ-45 socket
To replace a damaged or worn RJ-45 socket insert proceed as follows:

Equipment required: Kit, TREND part number 150058 – includes Tool x1 and Replacement Insert x10.


1. Switch the NaviTEK NT off.
2. Remove cables.
3. Carefully push the tool STRAIGHT into the socket. BE CAREFUL - DO NOT MOVE THE TOOL VERTICALLY!
4. Keeping the tool STRAIGHT firmly pull the insert out from the socket.
5. Using fingers replace a new insert STRAIGHT into the socket and secure in place by firmly pushing



3.




4.

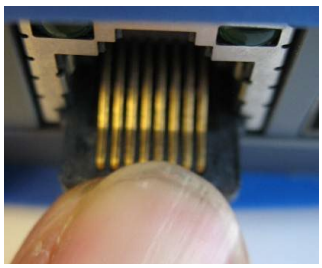

5.

Tester Layout

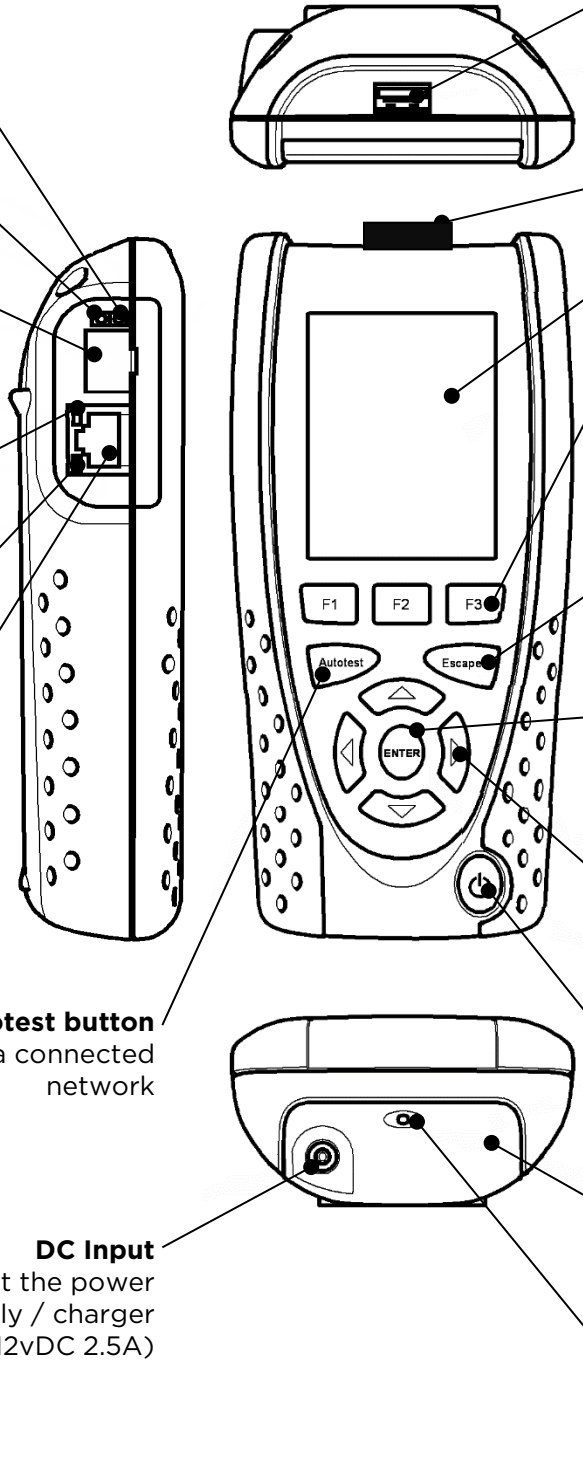

Optical link LED (Pro only)
Indicates that a Fiber network is connected

Optical activity LED (Pro only)
Indicates Fiber link data activity

Optical port (SFP) (Pro only)
Accepts SFP optical modules to connect the tester to 1Gb/s Fiber networks

Ethernet LED
Indicates that Ethernet is connected

Activity LED
Indicates Ethernet data activity

Cable socket
RJ45 socket to connect the tester to copper Ethernet cables and networks

USB socket
Used for uploading results and for downloading user logo and software updates

Wi-Fi Adapter
Connects to smartphone app

Touchscreen Display
Shows settings and results

Function buttons F1~F3
Press to activate the function shown in the screen area above the button

Escape button
Press to go back to the previous screen without saving changes

ENTER button
Press to select the currently highlighted screen function, or to confirm changes

Cursor buttons
Press to change which screen function or item is highlighted

Autotest button
Press to search for a connected network

Power button
Press to switch the tester ON/OFF


DC Input
Used to connect the power supply / charger (12vDC 2.5A)

Rechargeable battery module
(Non-rechargeable backup battery packs are also available)

Charging Indicator LED:
- ● Charging
- ○ Charging complete
- (Flashing) Not charging

Mode Selection

Select either with arrow key or top one of the test mode icons to select the desired test function.

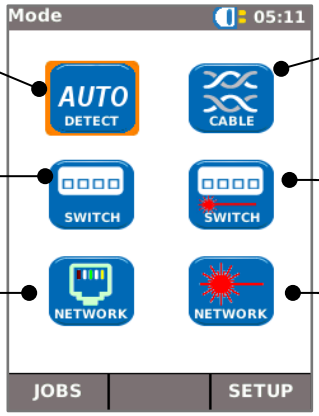

Auto detect
Automatically sets the test mode

Switch
Select copper interface switch test mode

Network
Select copper interface network test mode

Cable
Select copper cable testing mode

Switch
Select optical interface switch test mode

Network
Select optical interface network test mode

MAIN Screen

- The HOME screen is displayed following start-up.
- To refresh the HOME screen and update the display of the current connection status, press Autotest.
- To display more information about an item on the HOME screen, use the Cursor buttons to move the orange highlight to the required item on the screen, then press ENTER.
- To return to the HOME screen from any other screen, press Escape repeatedly until the HOME screen appears.



Current time

Memory Status
Shows the number of results stored / total capacity

Status Indications:
Battery full
Battery 2/3 full
Battery 1/3 full
Battery empty
Mains / on charge
Wi-Fi hot spot enabled

Tester Icon

Auto Save Selection
Highlight the icon using the cursor buttons and press ENTER to select how results should be saved

Notifications Area
Shows the current activity or status of the tester

JOBS / SETUP
Press F1 (JOBS) to access the JOBS menu or following F3 (MORE) press F1 (SETUP) to access the SETUP menu (see Menu Maps)


Job Selection
Shows the currently selected Job. Highlight the icon using the cursor buttons and press ENTER to select which Job to save results to

NAME
Press F2 (NAME) to edit the name format of the next and subsequent test results to be saved

MORE
Press F3 (MORE) to access the SETUP menu using F1 (SETUP), or to control the tone generator using F2 (TONE) when a cable is connected

MAIN Screen (with network cable connected)

When the tester is connected to an un-terminated cable greater than ~3m (10ft) long, Autotest displays a graphical illustration of the cable, using the colour scheme set in SETUP/TESTS/WIREMAP, showing the cable length and any faults by pair.

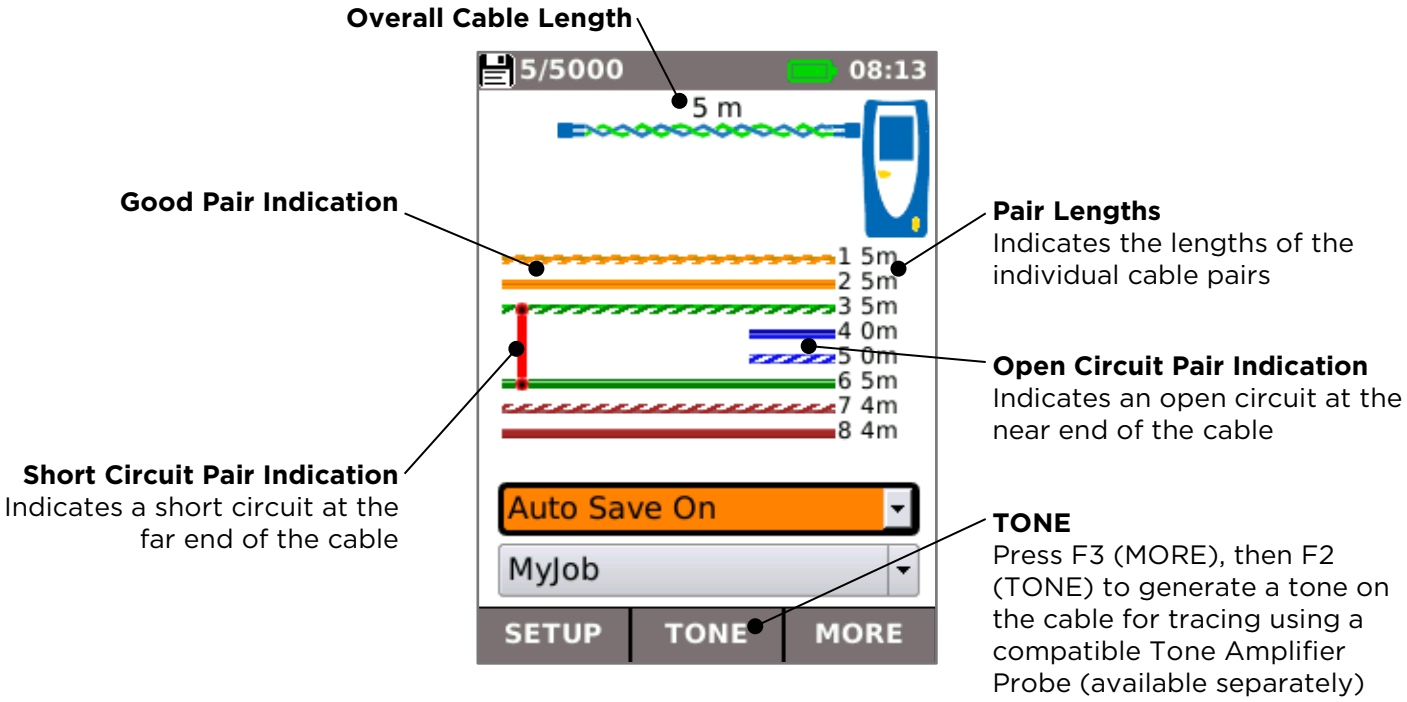

Pair Lengths
Indicates the lengths of the individual cable pairs


Open Circuit Pair Indication
Indicates an open circuit at the near end of the cable

Short Circuit Pair Indication
Indicates a short circuit at the far end of the cable

TONE
Press F3 (MORE), then F2 (TONE) to generate a tone on the cable for tracing using a compatible Tone Amplifier Probe (available separately)

MAIN Screen (with unknown network connected)

If the tester is accidentally connected to any type of network carrying voltages, for example a telephone or ISDN network, the HOME screen displays an alarm and details of the voltages. No further testing is possible until the voltages have been removed.

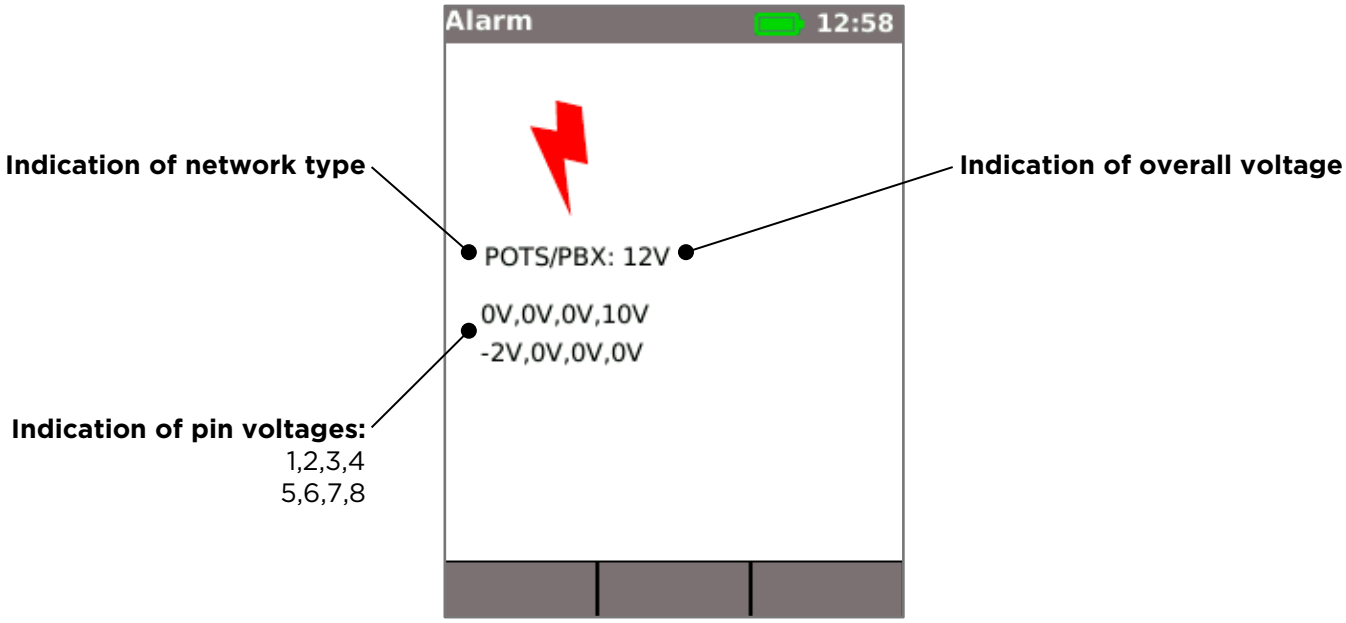


Indication of network type

Indication of overall voltage

Indication of pin voltages:
1,2,3,4
5,6,7,8

MAIN Screen (with network cable connected to Active Remote)

When the tester is connected to a cable that is terminated with an Active Remote, Autotest runs an advanced Wiremap test that can detect split pairs and faults by pin. The HOME screen displays a bar indicating the progress of the test. Select this bar and press ENTER to display the Wiremap result screen. When the test is complete the result is saved (depending on the Auto Save setting).

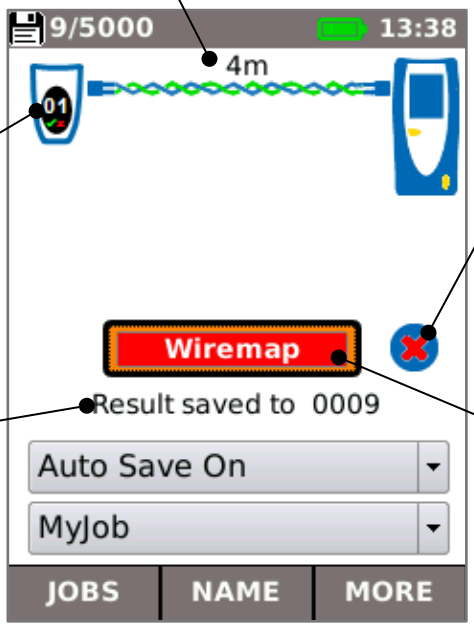


Overall Cable Length

Active Remote ID number

Test Status:
- Ready to test
- Test in progress
- Test Passed
- Test Failed

Result saved indication
Indicates the name of the last saved result

Wiremap test bar
Indicates progress and final test result (Green = PASS, Red = FAIL)
Highlight the bar using the cursor keys then press ENTER to display the Wiremap screen

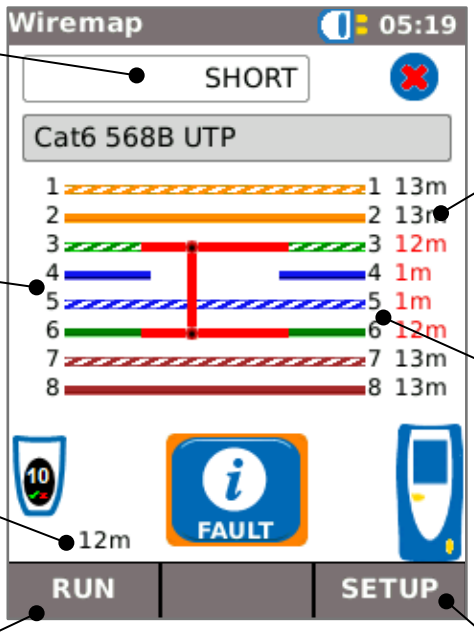

Test Result

Pair Lengths
Indicates the lengths of the individual cable pairs

Active Remote pin numbers

Tester pin numbers


Overall cable length

RUN
Press F1 (RUN) to re- run the Wiremap test without saving a result

SETUP
Press F3(SETUP) to set the Wiremap parameters according to the type of cable tested

MAIN Screen (with live copper network connected) and TESTS screen

When the tester is connected to a live copper-based network, Autotest detects the partner Ethernet device at the far end of the cable and automatically tests the network connection and displays information about it.

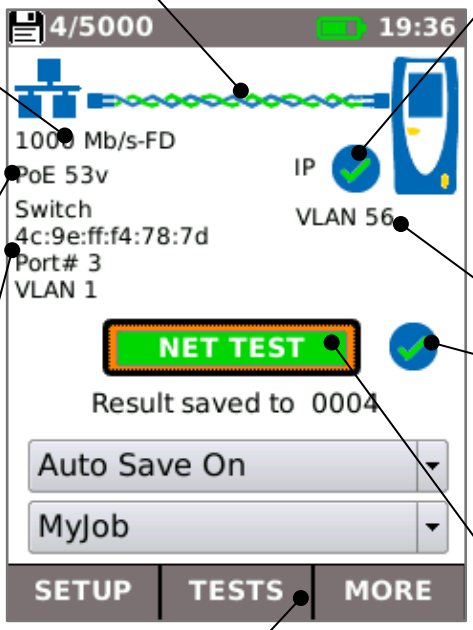

Copper network connection

Port rate and duplex
Select then press ENTER to display the Statistics, VLAN and Port screens

Power over Ethernet status
Select then press ENTER to display the PoE test screen

MAC and ID of switch port and port VLAN setting
Select then press ENTER to display details of the nearest switch, reported by CDP, LLDP or EDP (if supported by the switch)

Tester IP Status:
- IP address assignment in progress
- Dynamic (DHCP) IP address assigned
- Static IP address assigned
- IP address assignment failed


Select then press ENTER to display the IP screen

Tester VLAN ID

NET TEST Status:
- Ready to test
- Test in progress
- Test Passed
- Test Failed

NET TEST test bar
Indicates progress and final test result (Green = PASS, Red = FAIL)
Select then press ENTER to display the NET TEST screen in detail

TESTS
Press F3 (MORE) then F2 (TESTS) to display the TESTS menu to allow individual tests to be selected and run independently of the NET TEST

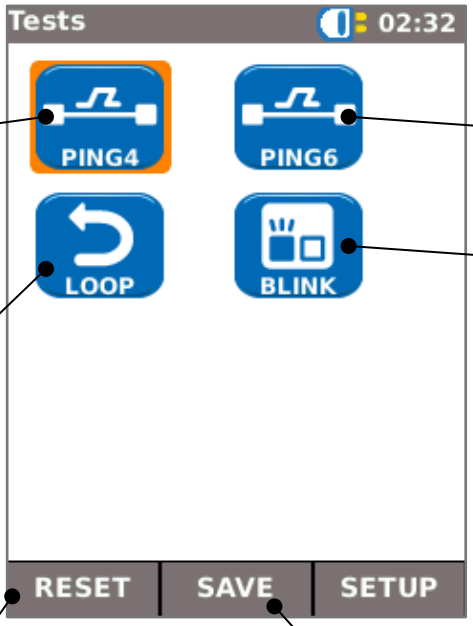

PING4
Select to access the screen to run and view Ping4 test results

PING6
Select to access the screen to run and view Ping6 test results

BLINK
Select to flash the switch LED to assist in port identification

LOOP (Pro only)
Select to access the screen to set up and apply various types of Ethernet loop


RESET
Press F1 (RESET) to reset the test results

SAVE
Press F2(SAVE) to save the test results

MAIN Screen (with live fiber network connected - Pro only)

When the Pro tester is connected to a live 1Gb/s fiber network, AUTO DETECT automatically detects the partner Ethernet device at the far end of the fiber.

Received Optical Power
Highlight Rx Pwr and press ENTER to display the optical screen with details about the SFP.

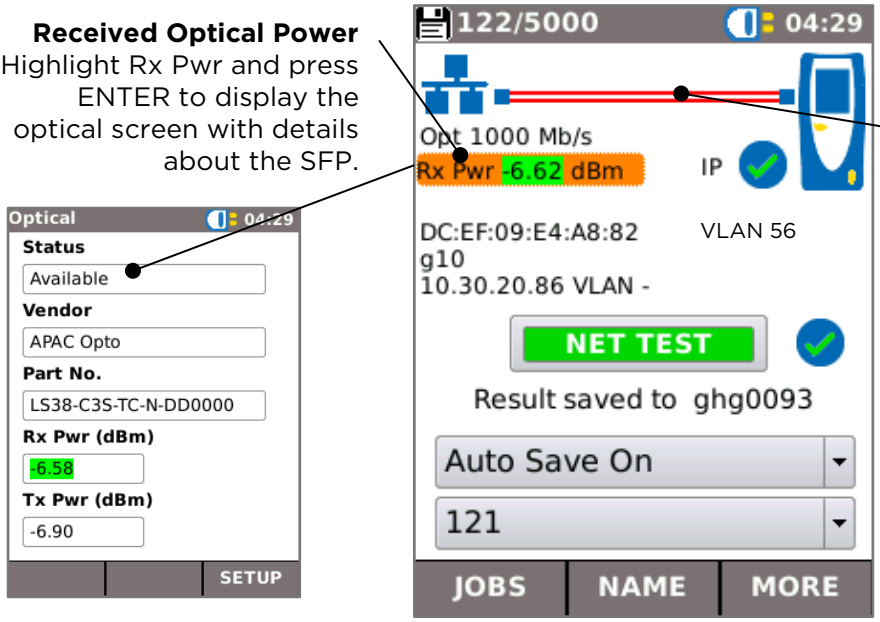


Fiber network connection

IP details screen

In the HOME screen, select the IP icon then press ENTER to display the IP screen.

This screen shows detail of the IP status and address of the tester and the IP addresses of the network elements that are tested by the NET TEST.

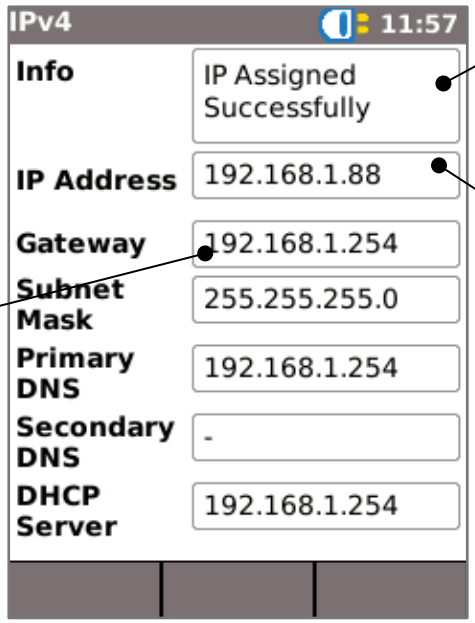


Info
Indicates whether an IP address has been assigned to the tester, by DHCP or statically

IP Address
Tester IP address

Network IP addresses
IP addresses of the various network elements

NET TEST and Netscan

When an Ethernet link is established, or Autotest is pressed while a link is up, a NET TEST is run automatically. This test consists of a series of Ping tests to multiple strategic targets in the network, a Trace Route to a set destination, and a scan of all the hosts in the local network. To display the NET TEST screen, select the test bar in the HOME screen and press ENTER.

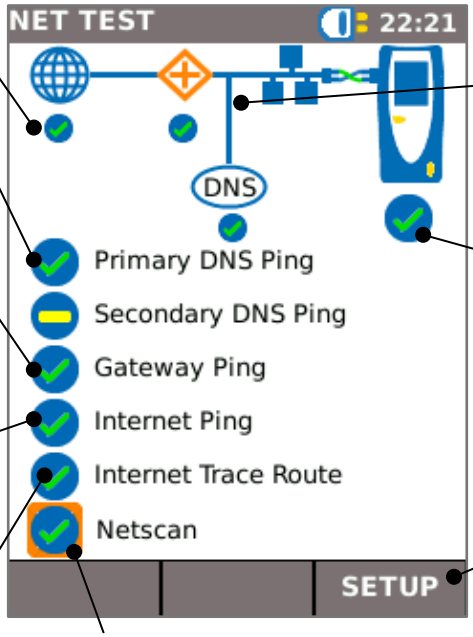

Individual test result

DNS Ping results
The Secondary DNS is only tested if the Primary DNS Ping fails . Select and press ENTER to display full details

Gateway Ping result
The Gateway is the route from the local network to the Internet. Select and press ENTER to display full details

Internet Ping result
If this test passes, the tested port has access to the Internet. Select and press ENTER to display full details


Trace Route result
Select and press ENTER to display a list of all the hops passed en route to the Internet destination

Network map
Each tested network element is shown by an icon that is highlighted when the test result is selected

Overall Test Result:
- Not tested
- Test in progress
- Test Passed
- Test Failed

SETUP
Press F3 (SETUP) to access the NET TEST setup screen

Netscan result
Select and press ENTER to display the Netscan screen

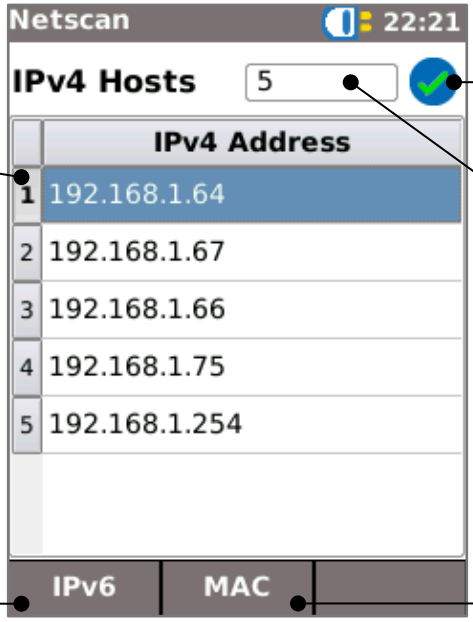

Host list
A list of all the hosts detected in the local network

Netscan test result


Number of hosts found

IPv6 / IPv4
Press F1 to display IPv6 hosts or IPv4 hosts

MAC / IP
Press F2 to display the MAC address or IP address for each host listed

Statistics, VLAN scan, Port, Errors and 802.1x status


When an Ethernet link is established, select the Port Rate / Duplex field in the HOME screen and press ENTER to display detailed information about the connection and the network.

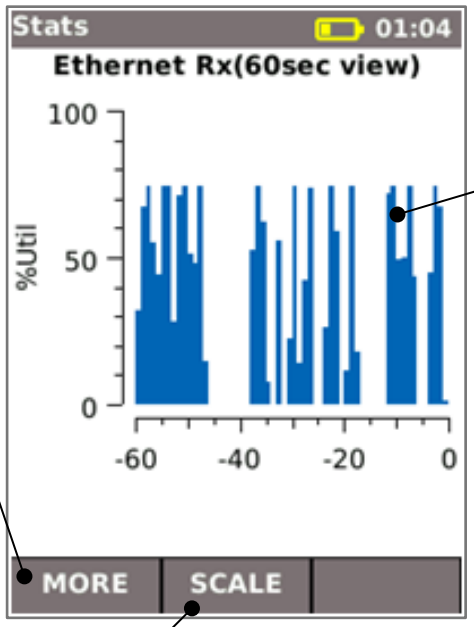

Traffic graph
Shows the percentage of the port rate utilised over time. Connect the tester to a mirror port or test port on the switch to monitor traffic in a particular network span

MORE
Press F1 (MORE) to display the next screen

SCALE
Press F2 (SCALE) to adjust the time scale

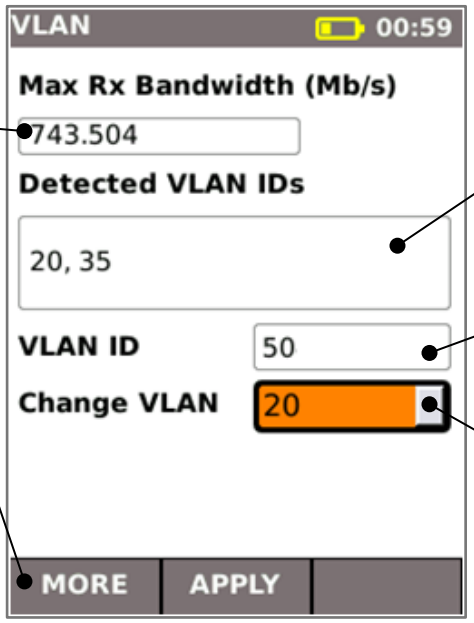


Bandwidth
Shows the peak traffic bandwidth

VLANs
Lists the VLANs with ID detected in the network traffic

VLAN ID
The current VLAN setting of the tester


MORE
Press F1 (MORE) to display the next screen

Change VLAN
Select a VLAN from the list of network VLANs detected. Press ENTER to set the chosen VLAN as the current tester VLAN setting, then press F2 (APPLY)

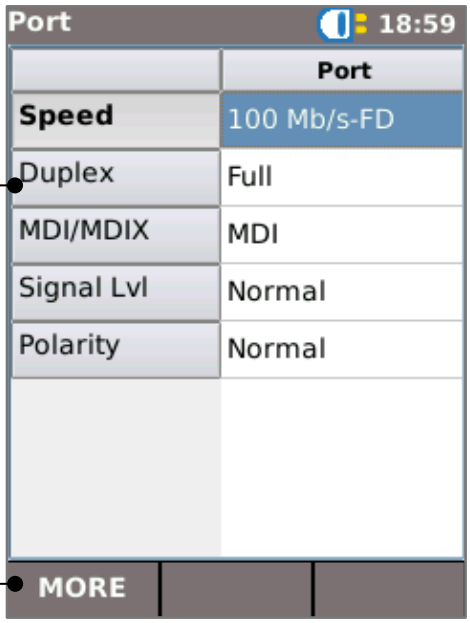


Port data
Shows information about the connection and the partner port

MORE
Press F1 (MORE) to display the next screen

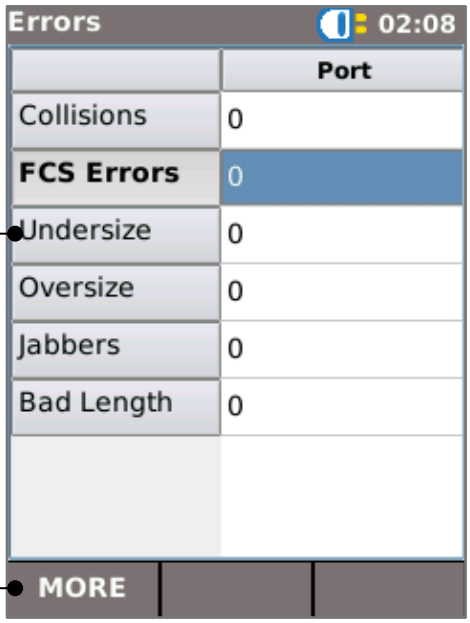


Error data
Shows the number of Ethernet errors detected

MORE
Press F1 (MORE) to display the next screen

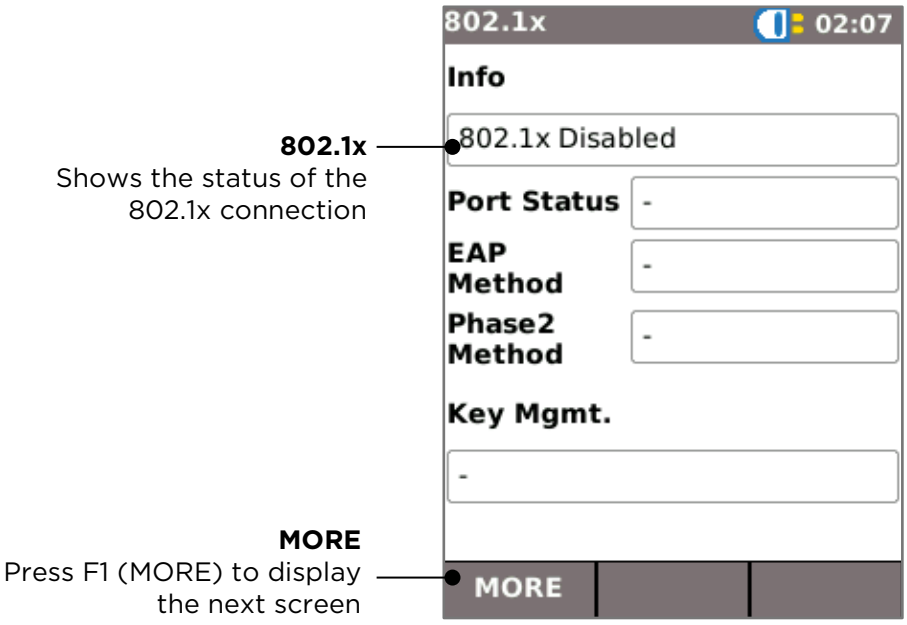

Power over Ethernet

When an Ethernet link is established, Autotest automatically tests the port for the presence of PoE and measures the available power by applying a minimum load. Select the PoE field in the HOME screen and press ENTER to display the PoE screen.

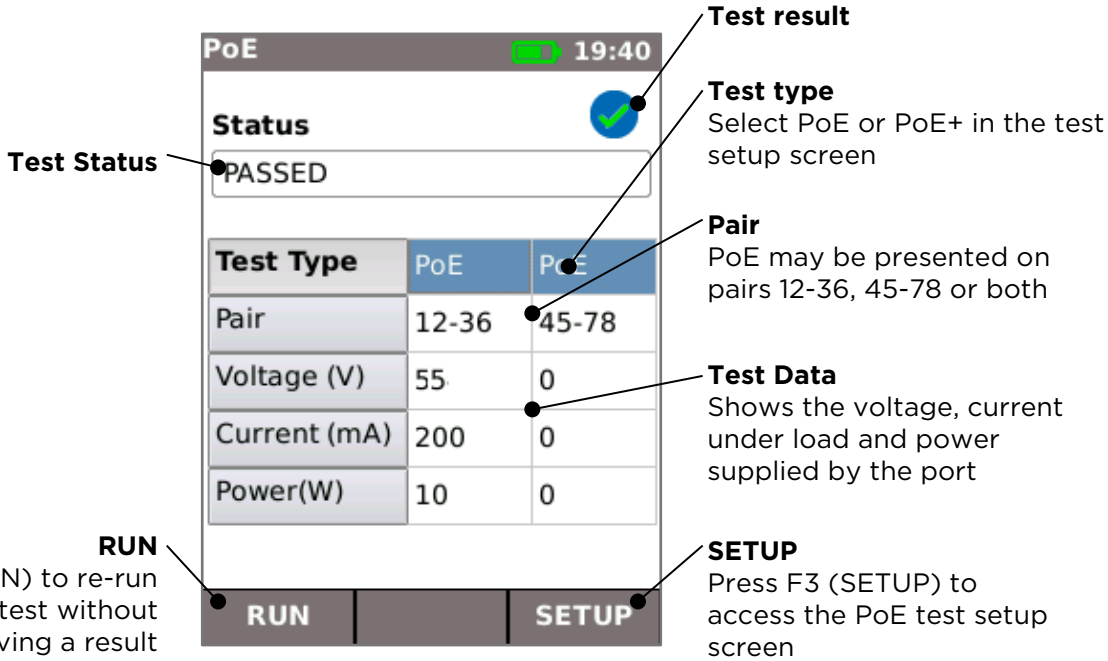


Port Discovery information details

When an Ethernet link is established, Autotest automatically scans the partner port for Link Layer Discovery Protocol (LLDP), Cisco Discovery Protocol (CDP) and Extreme Discovery Protocol (EDP) messages. These Discovery Protocol messages may contain various details about the switch and the port connected, depending on how they are configured. Discovery Protocol messages may take up to 60 seconds to be transmitted by the switch. In non-standard network configurations it is sometimes possible for Discovery Protocol messages to arrive from other devices in the network. In this case, the tester attempts to resolve which are the messages from the directly connected port.


Following link establishment, the screen flashes "Searching for Port Identification" until the first Discovery Protocol message is received. The screen then starts to flash the switch name and MAC address of the port that the Discovery Protocol message has come from. If the message is confirmed as coming from the directly connected port, the screen then shows full details of the port continuously.

At the end of 60 seconds from link establishment:


- If a unique or confirmed Discovery Protocol message has been received, the screen shows the port details continuously.
- If multiple different Discovery Protocol messages have been received, and it is not possible to resolve which one has come from the directly connected port, the screen shows "Multiple". The user can then select this and review a list of the different Discovery Protocol messages that have been received, to aid in identification of the correct port.
- If no Discovery Protocol message has been received, the screen shows "No Discovery Info".

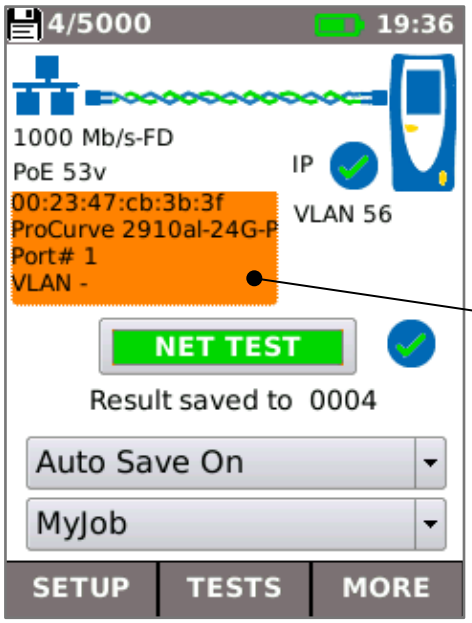

Port details
Select the switch / port details field in the HOME screen and press ENTER to display the port discovery details screen.

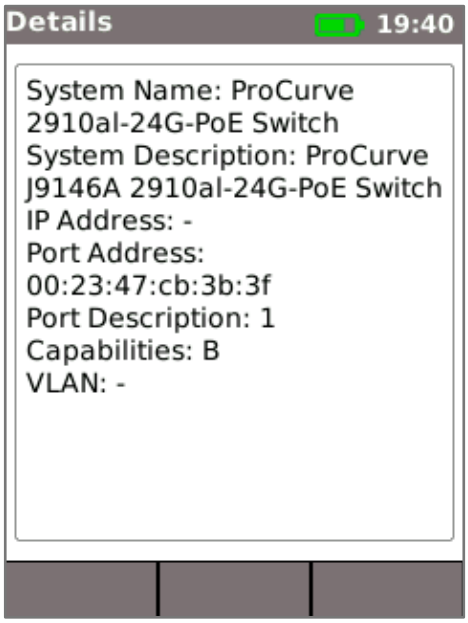

Menu Maps

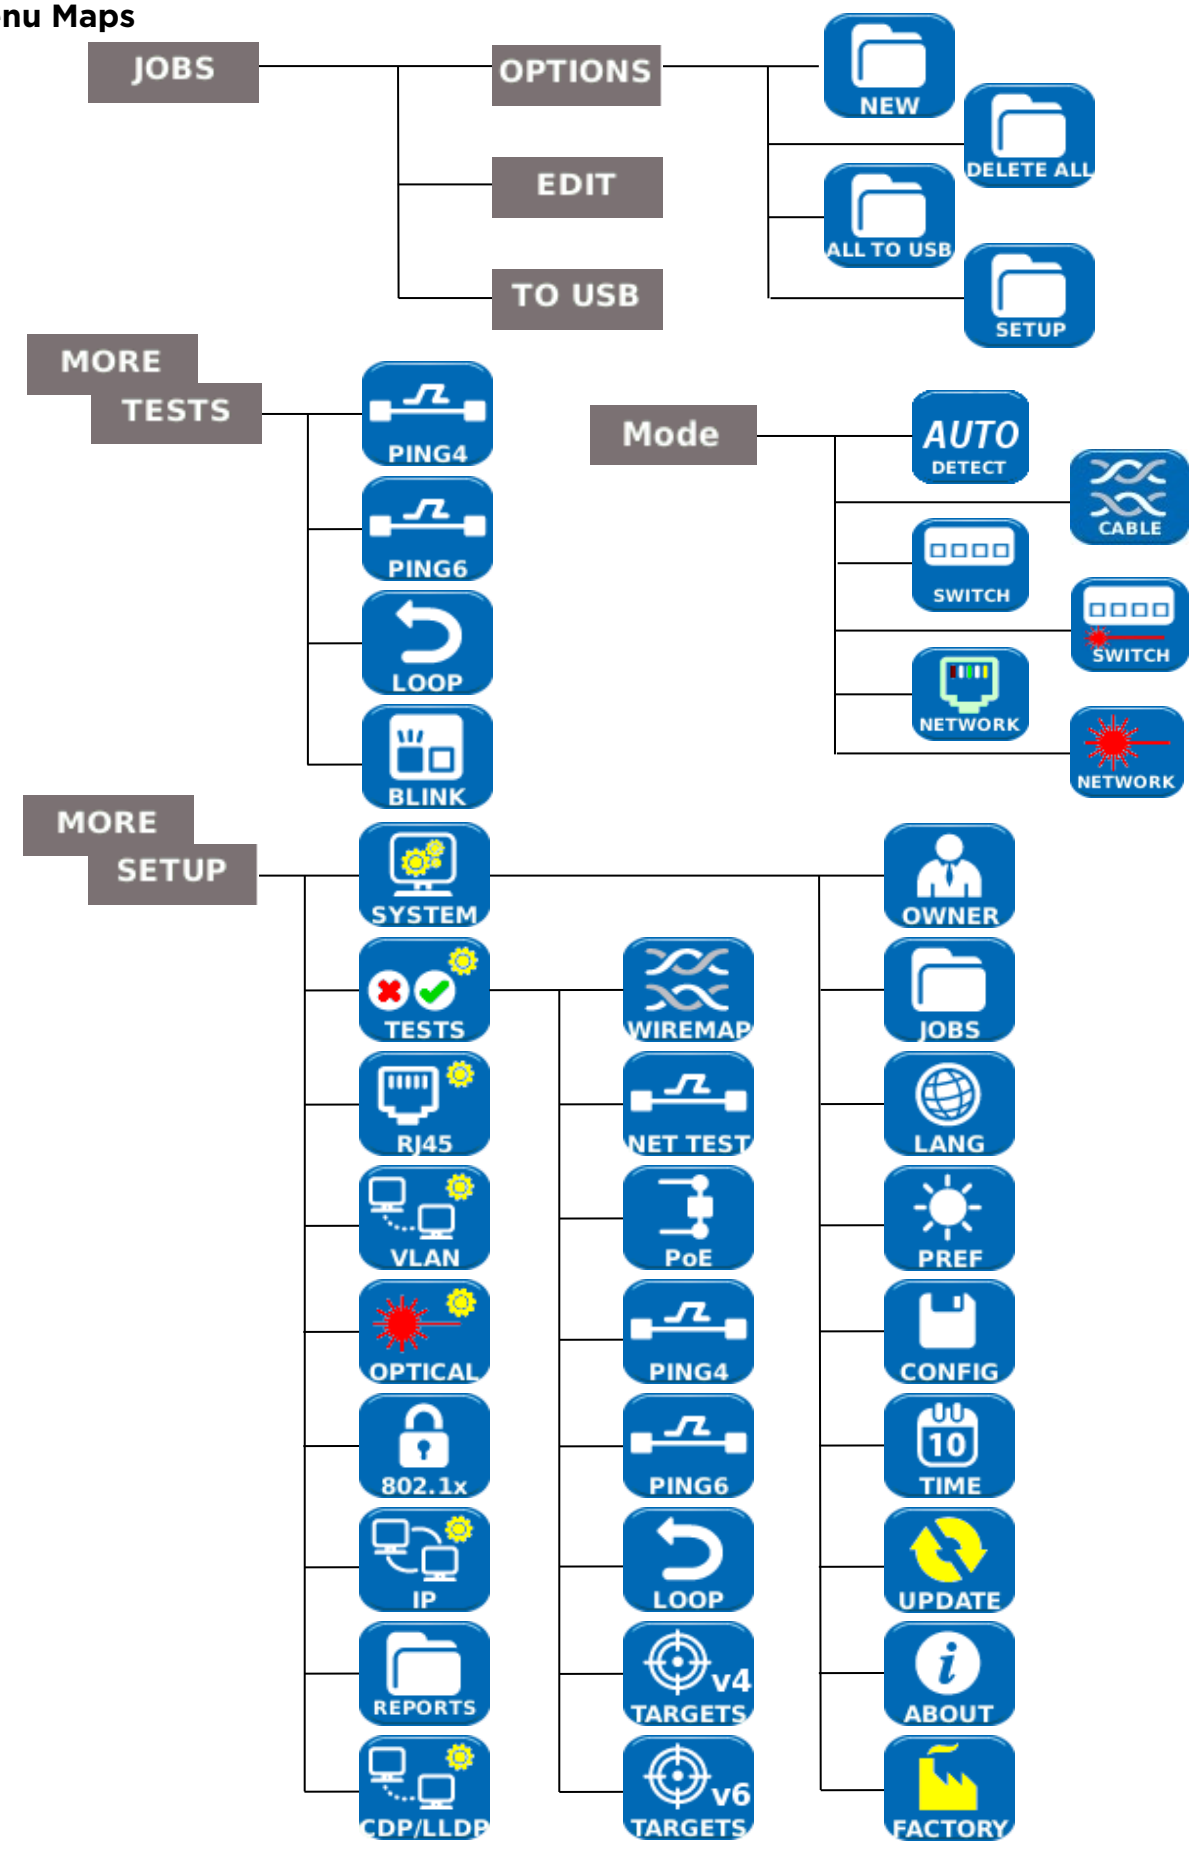
JOBS
OPTIONS
EDIT
TO USB
NEW
DELETE ALL
ALL TO USB
SETUP
MORE TESTS
PING4
PING6
LOOP
BLINK
Mode
AUTO DETECT
CABLE
SWITCH
SWITCH
NETWORK
NETWORK
MORE SETUP
SYSTEM
TESTS
RJ45
VLAN
OPTICAL
802.1x
IP
REPORTS
CDP/LLDP
WIREMAP
NET TEST
PoE
PING4
PING6
LOOP
v4 TARGETS
v6 TARGETS
OWNER
JOBS
LANG
PREF
CONFIG
TIME
UPDATE
ABOUT
FACTORY

Setup



Select SYSTEM to access the system setup:



Enter details of the test engineer and company information and logo (see Reports) for inclusion in the reports



Access the JOBS menu



Set the menu language



Set preferences for auto off, backlight, length units, date and time format



Export or import setup information



Set the date and time for inclusion in the reports



Update the software. All settings and results will be lost. Save data to USB or smartphone first.



View details about the system information of the tester



Reset to factory defaults. All settings and results will be lost. Save data to USB or smartphone first.



Select TESTS to access the tests setup:



Set the details of the Wiremap test:

- Cable Type
  - Cat 3, Cat 5, Cat 5e, Cat 6, Cat 6A, Cat 7 and 7A, Cat 8, USOC8 1Pair, USOC8 2Pair, USOC8 3Pair, USOC8 4Pair, ETH 1236, ETH 1278, PROFINET 4W, COAX RGxx, ISDN BRI, DB, Custom
- Shield Type
  - UTP - Shield must not be connected for test to pass
  - STP - Shield must be connected for test to pass
  - UTP / STP - Test can pass if shield is connected or disconnected
- Display Preference
  - None, 568A, 568B, USOC, TERA
- Custom NVP.
  - Accurate length measurement relies on correct setting of the Nominal Velocity of Propagation (NVP) for the cable to be tested. Use Custom NVP - enabling custom NVP and entering number
- Split Pair:
  - Enable or disable
- Xover Allowed:
  - Enable or disable



Set the details of the NET TEST:

- Primary / Secondary DNS and Gateway
  - Disabled - The target is not tested as part of the NET TEST
  - Auto - IP address of target is assigned by DHCP
  - Manual - IP address of target is assigned manually or picked from the Targets list by selecting 
- Target
  - Disabled - The Internet target is not tested as part of the NET TEST
  - IP Address - Enter a numerical IP address for the Internet target or pick from the Targets list by selecting 

    - URL - Enter a URL for the Internet target or pick from the Targets list by selecting 
- Ping Setup
    - Count - Number of Ping attempts
    - Pause - Interval between Ping attempts
    - Length - Number of bytes in the Ping packet
- TRoute Setup
    - TRoute - Include or omit the Trace Route test from the NET TEST
    - Max Hops - The number of hops that can be detected before the test fails to reach the destination target
    - Timeout - the timeout before the test fails to reach the destination target
    - Name Lookup - When ticked, the name of each hop is included in the test result. Note that selecting this option causes the test time to be longer
- IPv4 Netscan setup
    - Netscan - Disable Netscan from inclusion in the NET TEST or select Local or Custom network
    - IP Addr - Set Custom network sub-net
    - Scan range - Select a small scan range (Class C) for fast test time or a larger scan range (Class B) for a wider search



Set the details of the Power over Ethernet test:

- Type
    - PoE - Applies a load to draw current up to the maximum allowed for PoE
    - PoE+ - Applies a load to draw current up to the maximum allowed for PoE+
    - None - PoE test disabled
- Min PoE power (W)
    - Enter the minimum power in watts for the PoE test to pass
- Min PoE+ power (W)
    - Enter the minimum power in watts for the PoE+ test to pass



Set the details of the Ping 4 test



Set the details of the Ping 6 test



Set the parameters for the Ethernet Loop for Wireline (physical), MAC, IP and UDP layer loopback signal (Pro only)



Set up a list of targets to be used in the Ping and TRoute tests using IPv4 addresses or URLs



Set up a list of targets to be used in the Ping and TRoute tests, using IPv6 addresses or URLs



Select RJ45 to set the parameters for the RJ45 copper port including Auto Negotiation, Speed, Mode, Min Rx frame size, MDI and MAC address.



Select VLAN to set the VLAN ID and Priority of the tester if required



Select OPTICAL to set up minimum and maximum receiving optical power of pass fail limit. Select optical power item in the main screen to view information about the SFP. The following SFP types are supported. The use of other SFP types is possible but correct operation is not guaranteed.

Type	Manufacturer	Part No	Speed	Fiber type	Wavelength	Connector Type
SX	Avago	AFBR-5705PZ	1Gb/s	Multimode	850nm	LC Duplex
SX	Apac	LM28-C3S-TI-N-DD	1Gb/s	Multimode	850nm	LC Duplex
LX	Avago	AFCT-5705PZ	1Gb/s	Singlemode	1310nm	LC Duplex
LX	Apac	LS38-C3S-TC-N-DD	1Gb/s	Singlemode	1310nm	LC Duplex
ZX	Apac	LS48-C3U-TC-N-DD	1Gb/s	Singlemode	1550nm	LC Duplex



Select 802.1x to set the tester to use 802.1x security protocol if required



Select IP to set up the IP behaviour of the tester including IP type, address, Netmask, Gateway and DNS if required.



Select REPORTS to set the parameters to be used for the reports:

- Format
  - PDF & CSV - the reports contain both PDF and CSV files
  - PDF - the reports contain only a PDF file
  - CSV - the reports contain only a CSV file
- Size
  - Summary - the reports contain only a summary table listing the overall result of each test
  - Brief - the reports contain a summary table and a single page result for each test
  - Full - the reports contain a summary table and full details of each test
- Results
  - All- every test made is included in the reports
  - Pass - only tests that have passed are included in the reports
  - Fail - only tests that have failed are included in the reports
- SSID - The identity of the Wi-Fi hot spot set up by the tester for report transfer to smartphones (factory set)
- Wi-Fi Password - If required, edit the default password (TREND001606) used by the TREND Anyware™ app to access the tester.







Select CDP,LLDP,EDP to enable the various types of Discovery Prococol supported by the tester

Reports

Reports are very important because they are documented proof that the ports have been tested. To select the required report style press F3 (MORE) then F1 (SETUP) in the HOME screen, then select REPORTS. Alternatively, the setup screen can be accessed by JOBS / OPTIONS / SETUP.

The example 4-page Brief report below shows the results of tests on 3 ports:
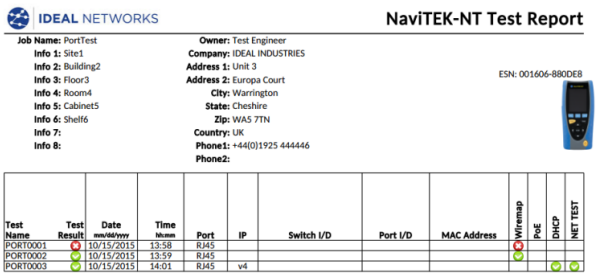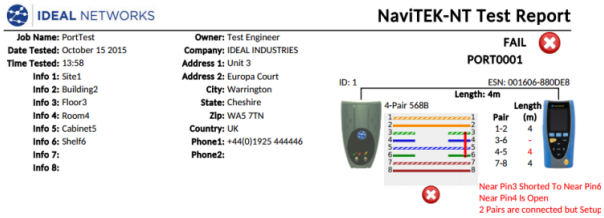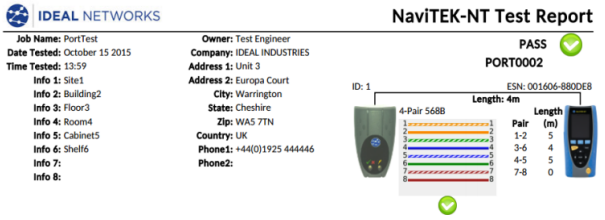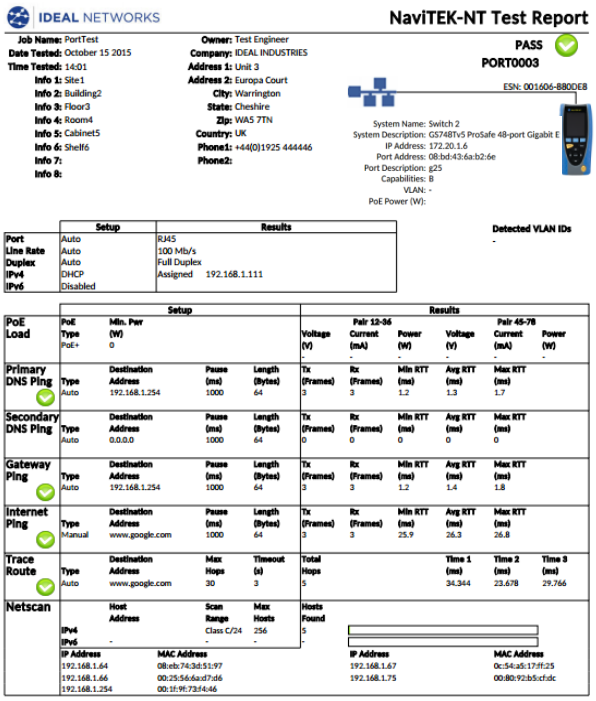
<table>
<tr>
<td>
IDEAL NETWORKS
NaviTEK-NT Test Report
Job Name: PortTest
Info 1: Site1
Info 2: Building2
Info 3: Floor3
Info 4: Room4
Info 5: Cabinet5
Info 6: Shelf6
Info 7:
Info 8:
Owner: Test Engineer
Company: IDEAL INDUSTRIES
Address 1: Unit 3
Address 2: Europa Court
City: Warrington
State: Cheshire
Zip: WA5 7TN
Country: UK
Phone1: +44(0)1925 444446
Phone2:
ESN: 001606-880DE8
Test Name | Test Result | Date mm/dd/yyyy | Time hh:mm | Port | IP | Switch I/D | Port I/D | MAC Address | Wiremap | PoE | DHCP | NET TEST
PORT0001 | 10/15/2015 | 13:58 | RJ45
PORT0002 | 10/15/2015 | 13:59 | RJ45
PORT0003 | 10/15/2015 | 14:01 | RJ45 | v4</td>
<td>Page 1
This is the summary of all the tests.
(To include your own logo in the PDF reports, select SETUP / SYSTEM / OWNER / F1 (LOGO). Insert a USB memory key containing an image named logo.png with maximum size of 250 x 160 pixels.)</td>
</tr>
<tr>
<td>
IDEAL NETWORKS
NaviTEK-NT Test Report
Job Name: PortTest
Date Tested: October 15 2015
Time Tested: 13:58
Info 1: Site1
Info 2: Building2
Info 3: Floor3
Info 4: Room4
Info 5: Cabinet5
Info 6: Shelf6
Info 7:
Info 8:
Owner: Test Engineer
Company: IDEAL INDUSTRIES
Address 1: Unit 3
Address 2: Europa Court
City: Warrington
State: Cheshire
Zip: WA5 7TN
Country: UK
Phone1: +44(0)1925 444446
Phone2:
FAIL
PORT0001
ID: 1
ESN: 001606-880DE8
Length: 4m
4-Pair 568B
Pair Length (m)
1-2 4
3-6 -
4-5 4
7-8 4
Near Pin3 Shorted To Near Pin6
Near Pin4 Is Open
2 Pairs are connected but Setup</td>
<td>Page 2
This is the Brief report for PORT0001.
It shows that this port failed the Wiremap test.
(Note the Job and Owner details)</td>
</tr>
<tr>
<td>
IDEAL NETWORKS
NaviTEK-NT Test Report
Job Name: PortTest
Date Tested: October 15 2015
Time Tested: 13:59
Info 1: Site1
Info 2: Building2
Info 3: Floor3
Info 4: Room4
Info 5: Cabinet5
Info 6: Shelf6
Info 7:
Info 8:
Owner: Test Engineer
Company: IDEAL INDUSTRIES
Address 1: Unit 3
Address 2: Europa Court
City: Warrington
State: Cheshire
Zip: WA5 7TN
Country: UK
Phone1: +44(0)1925 444446
Phone2:
PASS
PORT0002
ID: 1
ESN: 001606-880DE8
Length: 4m
4-Pair 568B
Pair Length (m)
1-2 5
3-6 4
4-5 5
7-8 0</td>
<td>Page 3
This is the Brief report for PORT0002.
It shows that this port passed the Wiremap test.
(Note the tester serial number)</td>
</tr>
<tr>
<td>
IDEAL NETWORKS
NaviTEK-NT Test Report
Job Name: PortTest
Date Tested: October 15 2015
Time Tested: 14:01
Info 1: Site1
Info 2: Building2
Info 3: Floor3
Info 4: Room4
Info 5: Cabinet5
Info 6: Shelf6
Info 7:
Info 8:
Owner: Test Engineer
Company: IDEAL INDUSTRIES
Address 1: Unit 3
Address 2: Europa Court
City: Warrington
State: Cheshire
Zip: WA5 7TN
Country: UK
Phone1: +44(0)1925 444446
Phone2:
PASS
PORT0003
ESN: 001606-880DE8
System Name: Switch 2
System Description: GS748Tv5 ProSafe 48-port Gigabit E
IP Address: 172.20.1.6
Port Address: 08:bd:43:6a:b2:6e
Port Description: g25
Capabilities: B
VLAN: -
PoE Power (W):
Setup / Results
Port Auto / RJ45
Line Rate Auto / 100 Mb/s
Duplex Auto / Full Duplex
IPv4 DHCP / Assigned 192.168.1.111
IPv6 Disabled
Detected VLAN IDs -
PoE Load
Primary DNS Ping
Secondary DNS Ping
Gateway Ping
Internet Ping
Trace Route
Netscan
IP Address / MAC Address
192.168.1.64 08:eb:74:3d:51:97
192.168.1.66 00:25:56:6a:d7:d6
192.168.1.254 00:1f:9f:73:f4:46
192.168.1.67 0c:54:a5:17:ff:25
192.168.1.75 00:80:92:b5:cf:dc</td>
<td>Page 4
This is the Brief report for PORT0003.
It shows that this port passed the NET TEST
Details of the setup and results of the port connection and the Discovery information from the port are shown
Details of the ping tests are shown
Details of the Trace Route test are shown
A list of all the hosts found by the Netscan test is shown, with a bar indicating how much of the available address space is used</td>
</tr>
</table>

Generating and Uploading Reports

1. Reports can be generated and exported to a USB key.

To generate a report to USB:


- Insert a USB key into the NaviTEK NT USB port.
- From the home screen press F1 (JOBS). The display will show the Job List screen.
- Scroll down to select the required Job
- To generate a report for a single result, press ENTER to display the Results list, select the required result, press ENTER, then TO USB (F3).
- To generate a report for a single Job select the required Job then press TO USB (F3).
- To generate a report for all Jobs, press OPTIONS (F2) then select ALL TO USB.

  The dialogue 'Result saved to USB' appears. Reports are now saved on the USB key in the selected format(s).

2. Reports can be generated and downloaded to a smartphone (only when no tests are running).

To enable Wi-Fi for results transfer:

- Insert Wi-Fi dongle into the NaviTEK NT USB port.
- From the home screen press F1 (JOBS).
- The display will show the Job List screen. Wi-Fi connectivity is indicated by the top bar on the NaviTEK NT screen changing from grey to blue:

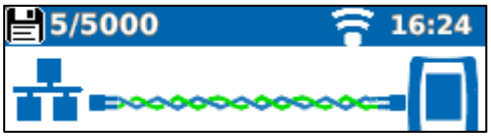

Now the NaviTEK NT is ready for results transfer wirelessly.

Note

To minimise battery consumption the Wi-Fi connectivity is only enabled for 5 minutes following power up and whenever the user is in the JOB screen.

To download results to an Android™ smartphone:

- Download and open TREND AnyWARE™ App from the Google Play™ Store.
- Insert the USB Wi-Fi adapter in the USB port of NaviTEK NT.
- Search and connect to NaviTEK NT. The SSID will be of the form "TRENDN-XXXXXX". This can be viewed on the NaviTEK NT under the SETUP / REPORTS screen.
- You will be prompted for the NaviTEK NT Wi-Fi password if it has been changed from the default value. You can change the password inside SETUP / REPORTS. Make sure the USB Wi-Fi adapter is not activated (no blue colour on top bar) otherwise the change will not be allowed.

- Once connected the App will display a list of JOBs on the NaviTEK NT. These can be selected and downloaded to the smartphone.
- Once results are on the smartphone they can then be transferred using email or other share mechanisms.

To download results to an iPhone®:

- Download and open TREND AnyWARE™ App from iTunes®.
- Insert the USB Wi-Fi adapter in the USB port of NaviTEK NT.
- Search and connect to NaviTEK NT. The SSID will be of the form "TRENDN-XXXXXX". This can be viewed on the NaviTEK NT under the SETUP / REPORTS screen.
- You will be prompted for the NaviTEK NT Wi-Fi password if it has been changed from the default value. You can change the password inside SETUP / REPORTS. Make sure the USB Wi-Fi adapter is not activated (no blue colour on top bar) otherwise the change will not be allowed.
- Once connected the App will display a list of JOBs on the NaviTEK NT. These can be selected and downloaded to the smartphone.
- Once results are on the iPhone® they can then be transferred using email or other share mechanisms.

Apple is a trademark of Apple Inc., registered in the U.S. and other countries.

Android is a trademark of Google Inc.

Specifications - NaviTEK NT Pro

Connectors

Test Ports

RJ45

Used for - Cable Test
- Ethernet Test

Connector type - Lifejack with user-replaceable contacts

Optical

Used for - Ethernet Test

Connector type - SFP socket

System Ports

USB

Used for - Software Update
- Results transfer
- 802.1x certificate transfer
- Import/export of config
- WiFi Adapter

Class - Host

Connector type - A

USB type – 1.1

Power

Used for – Battery charging
- Mains powering via adaptor

Connector type – 2.5mm pin power jack

Polarity – Centre pin positive

Voltage – 12v

Current – 2 A

Location – Bottom of optional power module
(Not present in standard alkaline battery pack)

Controls

ON/OFF

Push button

Used for – Power ON/OFF

Function Keys

F1 to F3

Used for – Screen-defined functions

Navigation Keys

Cursor and ENTER

Used for – User interface navigation

Escape

Used for – Return to previous menu

Autotest

Used for – Launch of automatic test function

Reset

Push button

Used for – Escape from exceptional lockup condition

Displays

Screen

LCD Touchscreen

Used for – Display of setup functions and results
Location – Front
Size – 2.8 inch diagonal
Type – QVGA Colour
Pixels – 240 x 320

LEDs

Charger LED

Used for – Indication of charging status
Colour – Green
Location – Bottom of standard power module
(Not present in optional alkaline battery pack)

RJ45 Link LED

Use– ON indicates link UP
Colour - Green

RJ45 Activity LED

Use – Flashing indicates link activity
Colour - Green

Optical Link LED

Use – ON indicates Optical link UP
Colour - Green

Optical Activity LED

Use – Flashing indicates Optical link activity
Colour – Green

Ports

RJ45

Setup

Auto Negotiation – Enabled
- Disabled

Speed – 10Mb/s
- 100Mb/s
- 1Gbps

Mode – Full Duplex
- Half Duplex

MDI - AUTO
- MDI
- MDIX

Min Rx Size – 19:99 bytes

MAC – Factory set

VLAN – Enabled / Disabled
- VLAN ID – 0 to 4094
- VLAN Priority – 0 to 7

(continued)

Ports (continued)

RJ45

Setup

802.1x
- Enabled / Disabled
- EAP Method
  - EAP-MD5
  - EAP-MSCHAPV2
  - EAP-GTC
  - EAP-TLS
  - EAP-PEAP/MD5
    - EAP-PEAP/MSCHAPV2
    - EAP-PEAP/GTC
    - EAP-PEAP/TLS
    - EAP-TTLS/MD5
    - EAP-TTLS/MSCHAPV2
    - EAP-TTL/GTC
    - EAP-TTLS/TLS
- Username
- Password
- Certificate
- Import password
- Root/CA certificate

Results

Link pulse polarity – Normal or Inverted
Link pulse height – Normal or Low

Tests

Ethernet Mode
- Ping4
- Ping6
- Trace Route4
- Trace Route6
- Hub Blink
- Netscan
- Loopback (Pro only)
- NET TEST (Ping DNS/Gateway/Internet, Trace Route, Netscan)

Cable Mode
- Wiremap
- Tone Generator
- Auto (Wiremap)

Service Detection

Detected Services
- PoE (802.3af/at. Not Cisco pre-standard)
- ISDN S
- PBX
- Unknown

Optical

Supported SFPs

The following SFP types are supported. Use of other types of SFP is possible but correct operation is not guaranteed.

SFP Type SX

Manufacturer Part # - Avago AFBR-5705Z / Apac LM28-C3S-TI-N-DD
Speed – 1Gbps
Fibre Type – Multimode
Wavelength – 850nm
Connector Type - LC Duplex

(continued)

Ports (continued)

Optical

SFP Type LX

Manufacturer Part # - Avago AFCT-5705Z
Speed – 1Gbps
Fibre Type – Singlemode
Wavelength – 1310nm
Connector Type - LC Duplex

SFP Type ZX

Manufacturer Part # - Apac LS48-C3U-TC-N-DD
Speed – 1Gbps
Fibre Type – Singlemode
Wavelength – 1550nm
Connector Type - LC Duplex

Setup

Speed - 1Gb/s
Min Rx Size – 19:99
MAC – Factory set
VLAN – Enabled / Disabled
- VLAN ID – 0 to 4094
- VLAN Priority – 0 to 7

802.1x - Enabled / Disabled
- EAP Method
  - EAP-MD5
  - EAP-MSCHAPV2
  - EAP-GTC
  - EAP-TLS
  - EAP-PEAP/MD5
    - EAP-PEAP/MSCHAPV2
    - EAP-PEAP/GTC
    - EAP-PEAP/TLS
    - EAP-TTLS/MD5
    - EAP-TTLS/MSCHAPV2
    - EAP-TTL/GTC
    - EAP-TTLS/TLS
- Username
- Password
- Certificate
- Import password
- Root/CA certificate

Tests

Optical
- Tx Power dBm (using a specified SFP)
- Rx Power dBm (using a specified SFP)
- Rx max and Rx min power limit for the pass/fail indication.

Ethernet Mode
- Ping4
- Ping6
- Trace Route4
- Trace Route6
- Hub Blink
- Netscan
- Loopback (Pro only)
- NET TEST (Ping DNS/Gateway/Internet, Trace Route, Netscan)

Cable Tests

Wiremap

Setup

Cable Type	- Cat 3, Cat 5, Cat 5e, Cat 6, Cat 6A, Cat 7 and 7A, Cat 8, USOC8 1Pair, USOC8 2Pair,USOC8 3Pair, USOC8 4Pair, ETH 1236, ETH 1278, PROFINET 4W, COAX RGxx, ISDN BRI, DB, Custom
Shield	- UTP - STP - UTP/STP
Display Reference	- None, - 568A - 568B - USOC - TERA
NVP	- Fixed 72% - Custom 59% - 89%
Split Pair	- Enable or disable
Xover Allowed	- Enable or disable

Termination Type

None - Open
Active Remote - #1 - #12

Tests (No Termination)

Faults	– Open circuit by pair - Short circuit by pin
Length of pair	– Metres / Feet (Set in System Setup) - Range 3-100m / 10-330ft

Tests (Active Remote Termination)

I/D – Remote #

Indications on Remote	– Voltage Warning (>±10volts on any pins) - Pass/Fail
Faults	– Open circuit by pin - Short circuit by pin - Crossed pairs - Split pairs - Bridged shorts - Remote shorts
Length of pair	– Metres / Feet (Set in System Setup) - Range 3-100m / 10-330ft

Tone Generator

Setup

No of Tones – 3

Wire I/D	*– Tone applied to one of 8 pins relative to the other 7* *- Tone applied across one of 4 pairs*

Test

Audible tone detected using compatible tone probe

Ethernet Tests

IPv4

Setup

Addressing - DHCP
- Static

Numerical - Address
- Netmask
- Gateway
- DNS1
- DNS2

IPv6

Setup

IPv6 Enable- Enabled
- Disabled

Addressing - Stateful (DHCPv6)
- Stateless
- Static

Numerical - 128bit HEX IP address

Network Prefix - 64 bit
- 128 bit

Pingv4

Setup

Target - Numerical address
- URL (Store up to 10)

Count - 1 to 999999

Pause - 1 to 5 Sec

Length - 8 to 1000 bytes.

Results

Info - READY
- IN PROGRESS
- PASSED
- NO RESPONSE
- UNKNOWN HOST

Tx Count - 1 to 999999

Rx Count - 1 to 999999

Delay(ms) - Minimum
- Average
- Maximum

Pingv6

Setup

Target - IPv6 address
- URL (Store up to 10)

Count - 1 to 999999

Pause - 1 to 5 Sec

Length - 8 to 1000 bytes.

(continued)

Ethernet Tests (continued)

Pingv6

Results

Info	- READY
	- IN PROGRESS
	- PASSED
	- NO RESPONSE
	- UNKNOWN HOST
Tx Count	- 1 to 999999
Rx Count	- 1 to 999999
Delay(ms)	- Minimum
	- Average
	- Maximum

Trace Routev4

Setup

Target	- Numerical address
	- URL
Max Hops	- 2 to 100
Timeout	- 2 to 30 sec
Type	- ICMP
	- UDP

Results

Info	- READY
	- IN PROGRESS
	- PASSED
	- NO RESPONSE
	- UNKNOWN HOST
Hop	- Numerical address
Delay(ms)	- t1
	- t2
	- t3

Trace Routev6

Setup

Target	- Numerical address
	- URL
Max Hops	- 2 to 100
Timeout	- 2 to 30 sec
Type	- UDP

Results

Info	- READY
	- IN PROGRESS
	- PASSED
	- NO RESPONSE
	- UNKNOWN HOST
Hop	- Numerical address
Delay(ms)	- t1
	- t2
	- t3

Ethernet Tests (continued)

Netscan

Setup

Netscan - Local
- Custom
- Disabled

IP Address - IPv4 address

Scan Range - 0 (class C /24)
- 1 (class C /20)
- 2 (class B /16)

Results

- List of IPv4 hosts
- List of IPv6 hosts

Blink

Test

Sequence - Off/10/Off/100/Off/1000 Mb/s (RJ-45)
- Off/On (Optical)

Loop (Pro only)

Setup

Loop Type - Wireline
- MAC
- IP
- UDP

All Traffic - Yes
- No

Statistics

IP

Results

IPv4
- info: listening, assigned, DHCP failed
- DHCP or Static
- IPv4 Address
- IPv4 Netmask
- IPv4 Gateway
- IPv4 DNS1
- IPv4 DNS2

IPv6
- Enabled or Disabled
- info: listening, assigned, DHCP failed
- Stateful (DHCPv6) or Stateless or Static
- IPv6 Address
- IPv6 Network Prefix, 64 bit or 128 bit
- IPv6 Link Address
- IPv6 DNS

(continued)

Statistics (continued)

Discovery
- LLDP/CDP/EDP
- Protocol
- MAC address
- Hostname / address
- Port Name
- Max 10 hosts

VLAN

Detection
- 1 Level VLAN ID
- Rx

802.1x

Status
- Auth Not Started
- Auth Started
- Auth Completed Successfully
- Auth Failed
- Connected Successfully (auth)

Port Status
- Unauthorised
- Authorised

EAP Method Used

Key Management Used

LINK

Results

PORT
- PoE Voltage 0 – 60V
- PoE Pairs 12/36 or 45/78
- Speed, Duplex
- MDI / MDIX
- Signal Level
- Polarity

PARTNER
- *10M-HD*
- *10M-FD*
- *100M-HD*
- *100M-FD*
- *1000M-HD*
- *1000M-FD*

(continued)

Statistics (continued)

LINK
Results
ERRORS - *Collisions*
- *FCS Errors*
- *Undersize*
- *Oversize*
- *Jabbers*
- *Bad Length*

Traffic Utilisation
Bargraph
Direction - *Rx*
Format - *Percentage of Link rate*
- *Peak value*
Time Interval- 1 min
- 10 min
- 60 min

Storage

Configurations
Internal storage
Number of configurations – 2 (Current & Factory settings)
Export/Import
Port – USB
Format - xml

Certificates
802.1x
Max number - 10

Results
Internal storage
Max Number of Jobs (Projects) - 50
Max Number of result sets per Job – 5000 depending on tests performed
Max total number of result sets - Up to 5000 depending on tests performed.
Export
Port – USB
- Wi-Fi
Format – PDF
- CSV (summary only)

System

Setup
Owner
Details – Name
- Company
- Address
- Phone

(continued)

System (continued)

Setup

Preferences

Language – English
- French
- German
- Spanish
- Italian
- Portuguese
- Chinese

Auto off - Disabled
- 3 mins
- 10 mins
- 30 mins

Backlight - Always On
- Dims to 50% after 3 mins

Length Units- Meters
- Feet

Date Format- dd/mm/yy
- mm/dd/yy

Time Format- 12 hour
- 24 hour

Software update

Upgrade - Via USB

General

Date/Time

Internal Clock

Used for – Timestamping results
Autonomy – Up to 1 day with battery removed

Power

Battery

Supported Types - Standard power module (4 x AA NiMH cells)
- Alkaline battery pack with 4 AA cells

Autonomy - *Up to 5* hours (power module only)
Recharge time – 3 hours (Power module only)
Battery level Indication - Full
- 2/3
- 1/3
- Empty

Physical

Dimensions

Length - 175mm
Width - 80mm
Depth - 40mm

Weight

Unit - 0.22kg
Batteries – 0.18kg

(continued)

General (continued)

Environmental

Temperature

Operating – 0°C to 40°C
Storage – -20°C to 70°C

Relative Humidity

Min 5%
Max 90% non-condensing

Approvals

EMC

EN 55022:2006 / A1:2007
EN55024:1998 / A1:2001 / A2:2003

Safety

IEC 60950-1:2005+A1:2009/EN 60950-1:2006+A1:2010

Glossary, abbreviations and acronyms

Term	Description
10M-HD	10 Mb/s Half Duplex
10M-FD	10 Mb/s Full Duplex
100M-HD	100 Mb/s Half Duplex
100M-FD	100 Mb/s Full Duplex
1000M-HD	1000 Mb/s Half Duplex
1000M-FD	1000 Mb/s Full Duplex
Broadcast	Communication from single sender to all connected receivers
CSV	Comma Separated Value file format
DHCP	Dynamic Host Configuration Protocol
DNS	Domain Name System
IP	Internet Protocol
IPv4	Internet Protocol version 4
Static	IP address assigned manually by the operator
Dynamic	IP address assigned automatically using DHCP
IPv6	Internet Protocol version 6
Stateful	IP address assigned automatically using DHCPv6
Stateless	P address assigned automatically using Stateless Address Autoconfiguration (SLAAC) without DHCPv6
Static	IP address assigned manually by the operator
LAN	Local Area Network
MAC	Media Access Control
MDI	Medium Dependent Interface
MDIX	Medium Dependent Interface Crossover
NVP	Nominal Velocity of Propagation of signals in a cable, expressed as a percentage of the speed of light in a vacuum. Can be determined using cable manufacturers' data or experimentally using a known cable length.
PDF	Portable Document Format
PoE	Power over Ethernet
PoE+	Power over Ethernet which exceeds the IEEE 802.3af limit of 12.95 watts
RJ45	Registered Jack standard for a modular connector using 8 conductors
Rx	Receive
SFP	Small Form-factor Pluggable
SSID	Service Set Identifier
STP	Shielded Twisted Pair
Tx	Transmit
URL	Uniform Resource Locator
USB	Universal Serial Bus
UTP	Unshielded Twisted Pair
Wi-Fi	Wireless Network